


MEMORY SYSTEM & ADJUSTABLE PEDALS

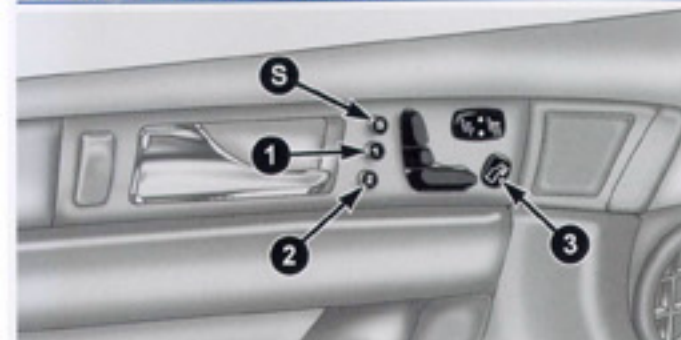

Save Your Settings Into Memory

- Set your seat, mirrors, pedals and radio preset buttons where you like them.
- Press and release "SET" **S** button on the driver's door. The **S** button flashes to show it's ready for the next step.
- Within 5 seconds, press and release the **1** button.
- Repeat above steps using button **2** to save settings for a different driver.

Save Memory Settings To Your Key

- Remove key from ignition.
- Within 5 seconds of pressing **1** or **2** button in above "Save" procedure, press "Lock" button on key to save settings in remote key transmitter.
- If programming does not work, refer to "Memory Seat" section in your Owner's Manual.



Adjustable Pedals

- You cannot adjust the pedals when the vehicle is in Reverse or if the Cruise Control is on.
- Push the button **S** to adjust the pedals forward or rearward.

AUTOMATIC TEMPERATURE CONTROL & REAR SEAT FAN CONTROL



- Adjust driver "TEMP" **1** to the desired temperature. (Try 72° to start).

NOTE: Press "DUAL" **2** to switch between synchronized and individual mode for setting passenger temperature.

- Press "AUTO HI" **3** to rapidly reach the temperature selected or "AUTO LO" **4** to reach the temperature more slowly but with less fan noise.

Rear Seat Fan Control



Your vehicle has a booster fan to direct conditioned air to the rear seats. Press "REAR" button **4** to select one of the following conditions:

- Automatic—"REAR AUTO" appears in display. Rear fan speed is matched to front fan speed setting.
- Manual—"REAR" appears in display. Fan control light is "ON". Rotate knob **5** in rear console to select desired rear fan speed, off or auto.
- OFF—No messages in display.

ELECTRONIC VEHICLE INFORMATION CENTER (EVIC)



US Or Metric Units In Display

- Press "US/M" button **1** to change units in message display from US to Metric and back.

NOTE: Units in odometer, navigation system and automatic temperature control display also change.

Mini-Trip Functions

- Press "STEP" button **3** to scroll through available functions.
- Press "RESET" button **4** to reset average miles per gallon.

Customer Programmable Features

NOTE: Transmission shifter must be in "P" (Park) position.

- Press "MENU" button **2** to scroll through the available features.
- Press "STEP" button **3** to display the available choices.
- Press "MENU" button **2** to select the displayed choice.

(Set the Factory Settings to "NO" to access all of the programmable features).

Setting The Analog Clock

- Press and hold button **5** to change the time.

NAVIGATION SYSTEM (OPTIONAL)



Provides route guidance throughout the U.S. and parts of Canada. For Map/Database updates call 1-866-733-5492.



Getting Started

- Press "NAV" **1** to activate the Main Menu and add a destination.
- Press arrows to move yellow highlighted choice within a Menu.
- Press "ENTER" **2** to accept the choice highlighted in the different Menus.
- Press "CANCEL" **3** to go back to previous Menu or return to MAP from Main Menu.

Tips

- Zoom in or zoom out—Press "ENTER" **2** and use arrow buttons.
- Cancel destination—Press "CANCEL" button **3** anytime during your trip to a destination.
- Turn system off—Press and hold the "CANCEL" button **3** for 4 seconds.
- To change screen display settings (orientation of the map and/or brightness of the screen)—use Display Menu found on System Settings Menu.


For more detailed information, see Navigation User Manual.

REAR SEAT ADJUSTMENTS



To Move 2nd Row Seat And Enter 3rd Row


- Lower headrest to its full down position.
- Pull up on bar below cushion and move seat to its full rear position.
- Pull up on seatback release lever **1** and allow seatback to fold downward.
- Pull up on seat release handle **2** and tilt seat completely forward, as shown below. If headrest hits back of front seat, move the front seat forward.

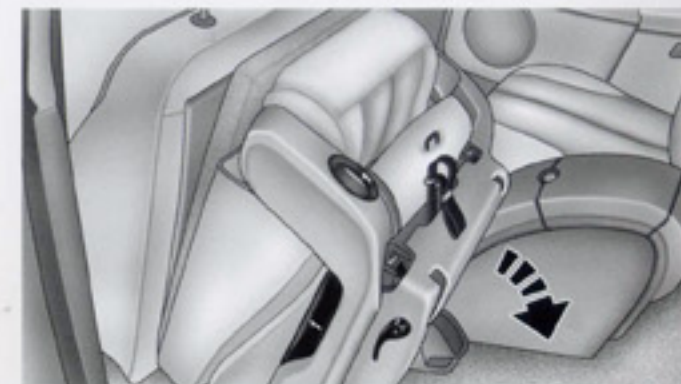

To Return 2nd Row Seat To An Upright Position


- Tilt seat rearward and push down firmly to lock rear attachments.
- Pull up on seatback release lever **1** and lift seatback to its full upright position.

REAR SEAT ADJUSTMENTS (CONTINUED)

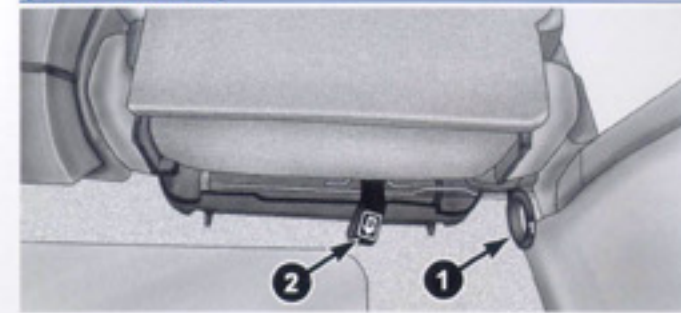

To Exit 3rd Row Seat

- Pull up on 2nd row seatback release handle **1** and allow seatback to fold downward.
- Pull release strap **2** and tilt seat completely forward.

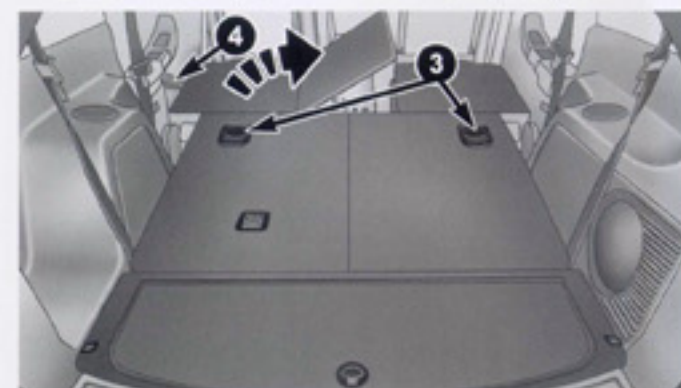

Load Floor Deployment

For maximum cargo space, 2nd and 3rd row seats fold flat and 2nd row center console is covered with an extra panel.

- From rear liftgate opening, pull up on 3rd row seat release handles **3** and push each seatback forward to its full down position.
- From rear door opening, pull on seatback release lever **1** and allow seatback to fold downward.
- Pull on load floor panel lock strap **4** and flip panel over the center console.

NOTE: If load floor panels are not aligned, check that 2nd row seats are moved completely rearward.

GARAGE DOOR OPENER

Your opener system can replace up to three remote control units including:

- Garage door opener
- Motorized gates
- Home lighting systems



NOTE: Key must be in ignition cylinder and turned to "ACC" or "ON" position.

To Clear All Memory

Press and hold the "●" and "●●●" buttons until a light begins to flash (approximately 20 seconds).

To Program

- Hold remote control no more than three inches from the vehicle's overhead console.
- Press and hold the button on the remote control and the button you wish to program at the same time until the console light begins to flash rapidly.
- If programming does not work, your garage door opener may be equipped with a "Rolling Code"; refer to Garage Door Opener "Programming Homelink" in your Owner's Manual.

About This Guide

This guide has been prepared to help you get quickly acquainted with your new Pacifica and to provide a convenient reference source for common questions. However, it is not intended as a substitute for your Owner's Manual.

For complete operational instructions, maintenance procedures and important safety messages, please consult your Owner's Manual and other Warning Labels in your vehicle.

For additional information on accessories to help personalize your vehicle, visit MOPAR.com or your local Chrysler dealer.



DaimlerChrysler Corporation

RADIOS & 6-DISC CD/DVD CHANGER (OPTIONAL)

Standard:
AM/FM/CD Stereo



Optional:
AM/FM/CD/Cassette



- Press "MODE" button 1A to select between AM, FM, and CD, if a CD is already loaded. If equipped with Optional Radio, press 1B to select CD already loaded.

NOTE: If equipped, button 1A or 1B also selects 6-disc CD/DVD changer or Satellite Radio.

- Press "AUDIO" button 2 to select Bass, Treble, Balance and Fade settings. Rotate volume knob to make adjustments.



To Load CD or DVD Discs

- Press one of the disc position buttons 3.
- If the light directly above the button number flashes, skip to the next step. If the light stays on, a disc is already loaded in that position. Try a different button.
- Wait for the disc slot light to stay on before loading a disc (label side up).

To Unload Discs

- Press the disc position button 3 to select desired disc.
- Press the "EJT" button.


REAR SEAT VIDEO™ & HEADPHONE AUDIO (OPTIONAL)

Rear Seat Video™

- Load DVD disc in 6-disc changer.
- Use remote control and On-screen Menu to select Play Options.

Video screen adjustments:

- 4 Adjust screen size
- 5 Select On-screen Option displayed
- 6 Adjusts screen brightness

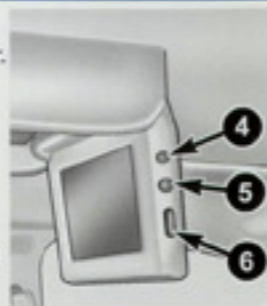


Headphone Audio

- Aim remote at CD/DVD changer and press button 1.

- Headphone icon on radio display will flash and rear speakers will go silent.

NOTE: The remote control needs 2 AAA batteries to operate. Headphones need 3 AAA batteries.

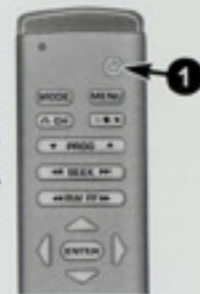

- Press button 2 on headphone.
- Wait for "Signal" light to turn from red (on) to green (signal received).
- Adjust volume control 3. Rotate up to increase volume and down to decrease.

NOTE: Headphones automatically turn off if no signal is received for more than 45 seconds.

SUNROOF & POWER LIFTGATE (OPTIONAL)



Power Sunroof

- Automatic Open—Press "OPEN" button quickly 1.
- Partial Open—Press and hold "OPEN" button 1.
- Vent—Press and hold "VENT" button 2.
- Close—Press and hold "CLOSE" button 1.

Power Liftgate

- Press the liftgate button 4 to open the rear liftgate. Press a second time to close the liftgate. Refer to Power Liftgate in your Owner's Manual for disabling conditions.

—OR—

- Pressing the liftgate button 4 on your key will operate your liftgate in the same manner.



Uconnect™ HANDS-FREE PHONE SYSTEM (OPTIONAL)

NOTE: Uconnect™ system requires a Bluetooth™ Hands-Free Profile cellular phone.



NOTE: Key must be in ignition cylinder and turned to "ACC" or "ON" position.

To Link Phone With System - Required For "First Time" Use Of Each Phone

- Press Uconnect™ button 1.
- After the system responds with a ready beep... say "Setup pairing."
- Follow series of system prompts for directions on completing the pairing steps.

NOTE: To complete this process, you also need to refer to instructions in the cellular phone User's Guide.

- System is automatically ready whenever "linked" phone is "ON."

To Make A Phone Call

- Press Uconnect™ button 1.
- After system ready beep... say "Dial" followed by the phone number. A name can replace the phone number, if that name has already been entered on the system phonebook.

To Answer A Phone Call

- You hear "Incoming call," press Uconnect™ button 1 to answer.

To Add Phonebook Entry

- Press Uconnect™ button 1.
- After system ready beep... say "Phonebook new entry."
- Follow system prompts through procedure.

For more detailed information, see your Owner's Manual.

CHRYSLER

PACIFICA



2004 QUICK REFERENCE GUIDE